

[FIG. 2]

- 1: TORQUE COMMAND
- 2: CURRENT CONVERTER
- 4: CURRENT DETECTOR
- 5: CURRENT DETECTOR
- 8: d-q CONVERTER
- 11: VOLTAGE CONVERTER
- 13: VOLTAGE CONVERTER
- 15: d-q CONVERTER
- 19: POWER CONVERTER
- 20: ABSOLUTE VALUE CIRCUIT
- 21: DETECTION LEVEL SETTER
- 22: COMPARATOR
- 23: BREAK DETECTION SIGNAL
- 24: MAGNETIZING CURRENT COMMAND GENERATOR
- A1: MOTOR
- A2: ENCODER
- A3: MOTOR PHASE

[FIG. 3]

- A1: TORQUE COMMAND VALUE

图3


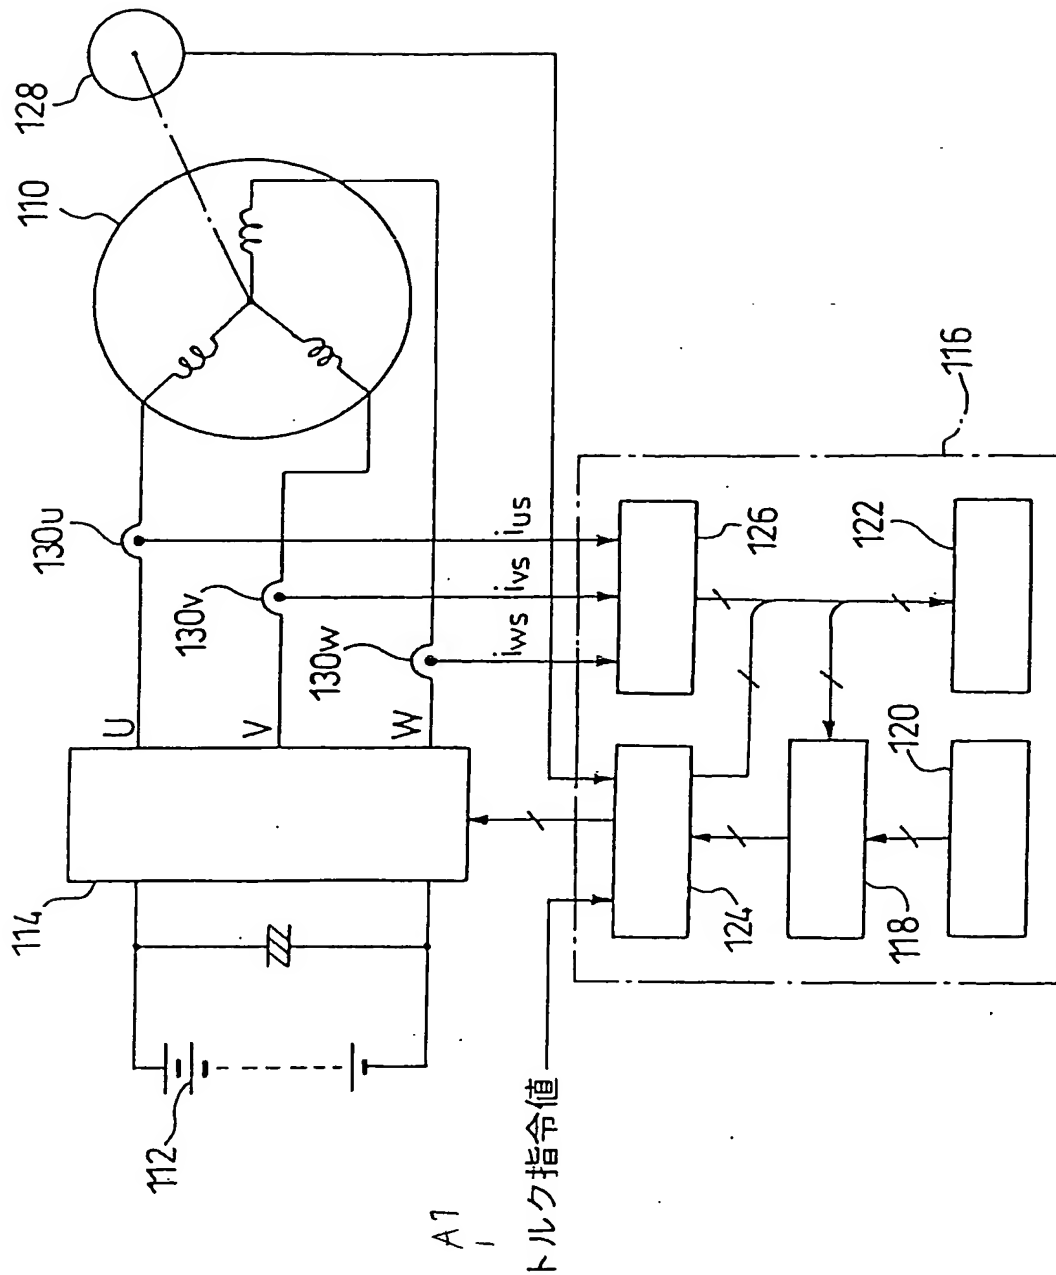


Fig. 3

4

Fig. 4

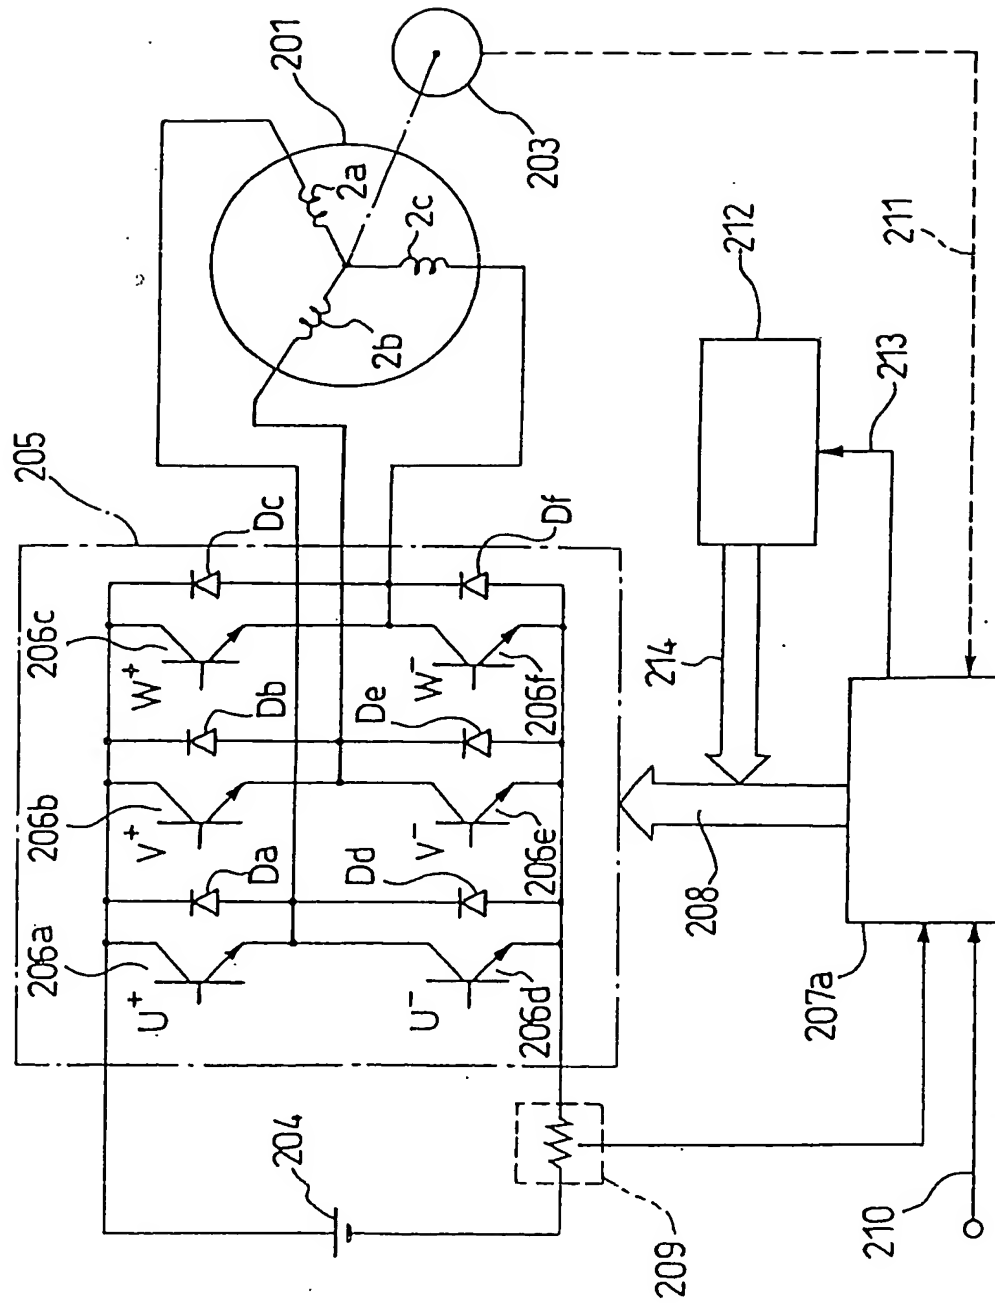

[FIG. 1]

1: TORQUE COMMAND
2: CURRENT CONVERTER
4: CURRENT DETECTOR
5: CURRENT DETECTOR
8: d-q CONVERTER
11: VOLTAGE CONVERTER
13: VOLTAGE CONVERTER
15: d-q CONVERTER
19: POWER CONVERTER
20: ABSOLUTE VALUE CIRCUIT
21: DETECTION LEVEL SETTER
22: COMPARATOR
23: BREAK DETECTION SIGNAL
A1: MOTOR
A2: ENCODER
A3: MOTOR PHASE